

THE TECHNICAL CONTENT OF THIS DOCUMENT IS APPROVED UNDER  
THE AUTHORITY OF EASA.21J.140 (C515 ISS. 2)

## **7.21 EASY-ACCESS BASKET DOORS**

### **7.21.1 GENERAL**

This supplement shall be inserted in the Maintenance Manual, in Section 7: 'Supplements' with the revisions record sheet amended accordingly.

Information contained herein supplements, or in the case of conflict, supersedes that contained in the basic Maintenance Manual. For Limitations, Procedures, and Performance Data not contained in this supplement, consult the basic Hot Air Balloon Maintenance Manual.

### **7.21.2 ENVELOPE REPAIRS**

No change.

### **7.21.3 BASKET REPAIRS**

#### **7.21.3.1 ROUTINE MAINTENANCE**

Metal hinges should be inspected before every flight for damage, wear or distortion. Ensure that all the retaining screws are tight.

### **7.21.4 FUEL SYSTEM REPAIRS**

No change.

### **7.21.5 INSTRUMENT REPAIRS**

No change.

**7.21.6 MAINTENANCE SCHEDULE**

<b>Basket Type:</b>			
<b>Part No.:</b>		<b>Serial No.:</b>	

**7.21.6.5.8 Basket (additional)**

<b>Component</b>	<b>Check / Inspect / Record</b>	<b>Pass/Fail (✓)/(x)</b>
Hinges (Steel)	Check metal hinges (if fitted) for damage wear or distortion. Check that retaining screws are tight.	
Locks	Check Function, lubricate if necessary	
Trim	Check condition / present	

**7.21.6.6.5 Baskets (additional)**

**Metal door hinges:** Check the hinge for damage or distortion. Check the basket frame for wear at the hinge points.

**Locks:** Check the locks for damage or distortion. Check the basket frame for wear at the locking points.

<b>Workpack No.</b>	<b>CN</b>	<b>Inspection Date</b>	<b>Inspectors Signature/No.</b>
---------------------	-----------	------------------------	---------------------------------