

The technical content of this document is approved under the authority of EASA.21J.140 (C547)

## **7.19 DOUBLE, TRIPLE AND QUAD DEMOUNTABLE BURNERS**

### **7.19.1 GENERAL**

This supplement shall be inserted in the Maintenance Manual, in Section 7: 'Supplements' with the revisions record sheet amended accordingly.

Information contained herein supplements, or in the case of conflict, supersedes that contained in the basic Maintenance Manual. For Limitations, Procedures, and Performance Data not contained in this supplement, consult the basic Hot Air Balloon Maintenance Manual.

### **7.19.2 ENVELOPE REPAIRS**

No change.

### **7.19.3 BASKET REPAIRS**

No change.

### **7.19.4 FUEL SYSTEM REPAIRS**

No change.

### **7.19.5 INSTRUMENT REPAIRS**

No change.

**7.19.6 MAINTENANCE SCHEDULE**

<b>Burner Type:</b>			
<b>Part No.:</b>		<b>Serial No.:</b>	

**7.19.6.5.7 DEMOUNTABLE BURNER (ADDITIONAL)**

<b>Component</b>	<b>Check / Inspect / Record</b>	<b>Pass/Fail (✓)/(x)</b>
Quick Release Pins	Inspect pins for wear or damage, Check correct function	

**Removable Burner Locking Pins:** Check pins for wear or damage. Check that the pip-pins operate correctly.

<b>Workpack No.</b>	CN	<b>Inspection Date</b>	<b>Inspectors Signature/No.</b>
---------------------	----	------------------------	---------------------------------