

The technical content of this document is approved under the authority of EASA.21J.140 (C547)

7.20 BASKET TOWING PLATES

7.20.1 GENERAL

This supplement shall be inserted in the Maintenance Manual, in Section 7: 'Supplements' with the revisions record sheet amended accordingly.

Information contained herein supplements, or in the case of conflict, supersedes that contained in the basic Maintenance Manual. For Limitations, Procedures, and Performance Data not contained in this supplement, consult the basic Hot Air Balloon Maintenance Manual.

7.20.2 ENVELOPE REPAIRS

No change.

7.20.3 BASKET REPAIRS

No change.

7.20.4 FUEL SYSTEM REPAIRS

No change.

7.20.5 INSTRUMENT REPAIRS

No change.

7.20.6 MAINTENANCE SCHEDULE

Basket Type:			
Part No.:		Serial No.:	

7.20.6.5.8 BASKET

Component	Check / Inspect / Record	Pass/Fail (✓)/(x)
Towing Plates	Check basket towing plates are secure and free from wear.	
Towing Strops	Check karabiners, shackles and securing clip for damage and correct operation. Check rope or wire strop for damage.	

7.20.6.6.5 Basket

Basket towing plates: On solid floor baskets, check the bolts for tightness and the floor around the plates for damage. On woven floor baskets, check the bolts for tightness and the condition of the runners and weave around the plates.

Workpack No.	CN	Inspection Date	Inspectors Signature/No.
--------------	----	-----------------	--------------------------